



Metabox Driver Install Steps and Recommendations

1. Once your Windows installation has completed and you're at the desktop, you will need to locate the drivers pack, either downloaded and extracted directly from the Metabox website or from the disk provided with the laptop (using a USB disk reader).

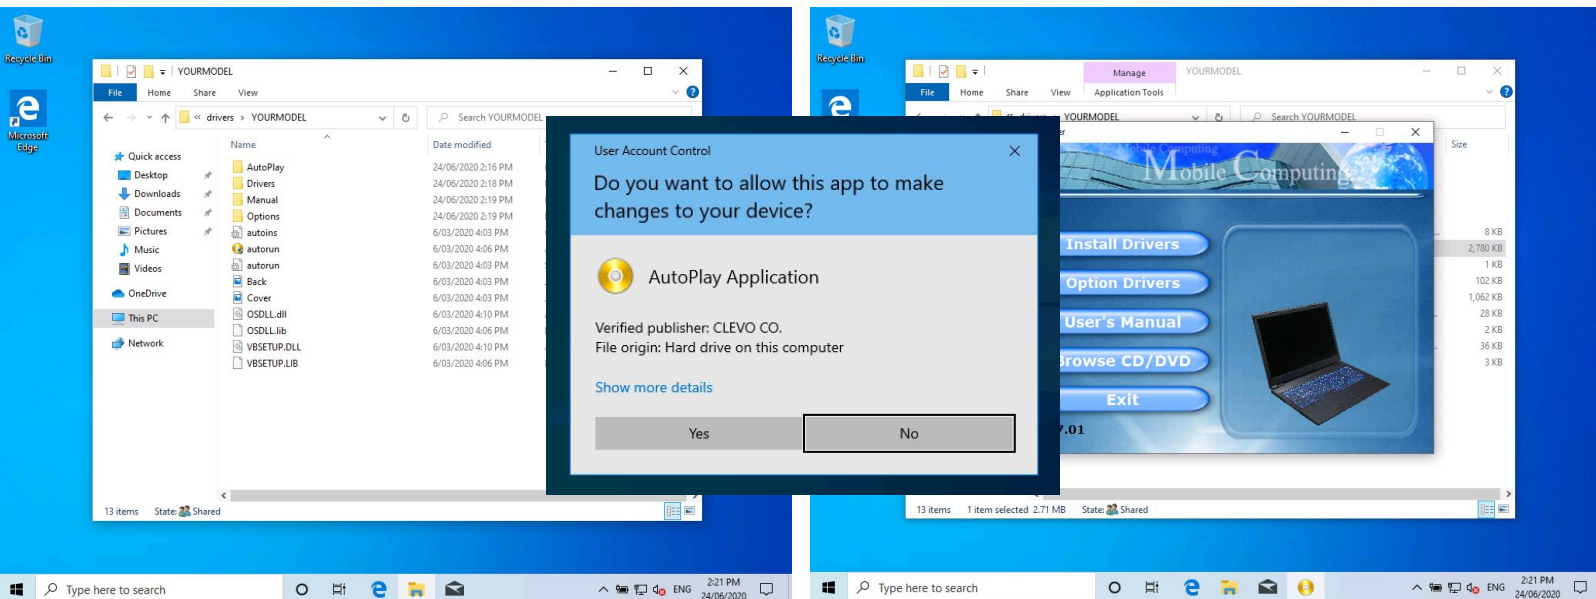


2. Run the Autorun application file to start the Drivers and Utilities installer, and after clicking on the 'Install Drivers' button, please note that you'll need to accept the popup prompt to Restart your computer into 'UAC Disabled mode'. Shown below and accessed by clicking on the notification icon in the far bottom right corner.


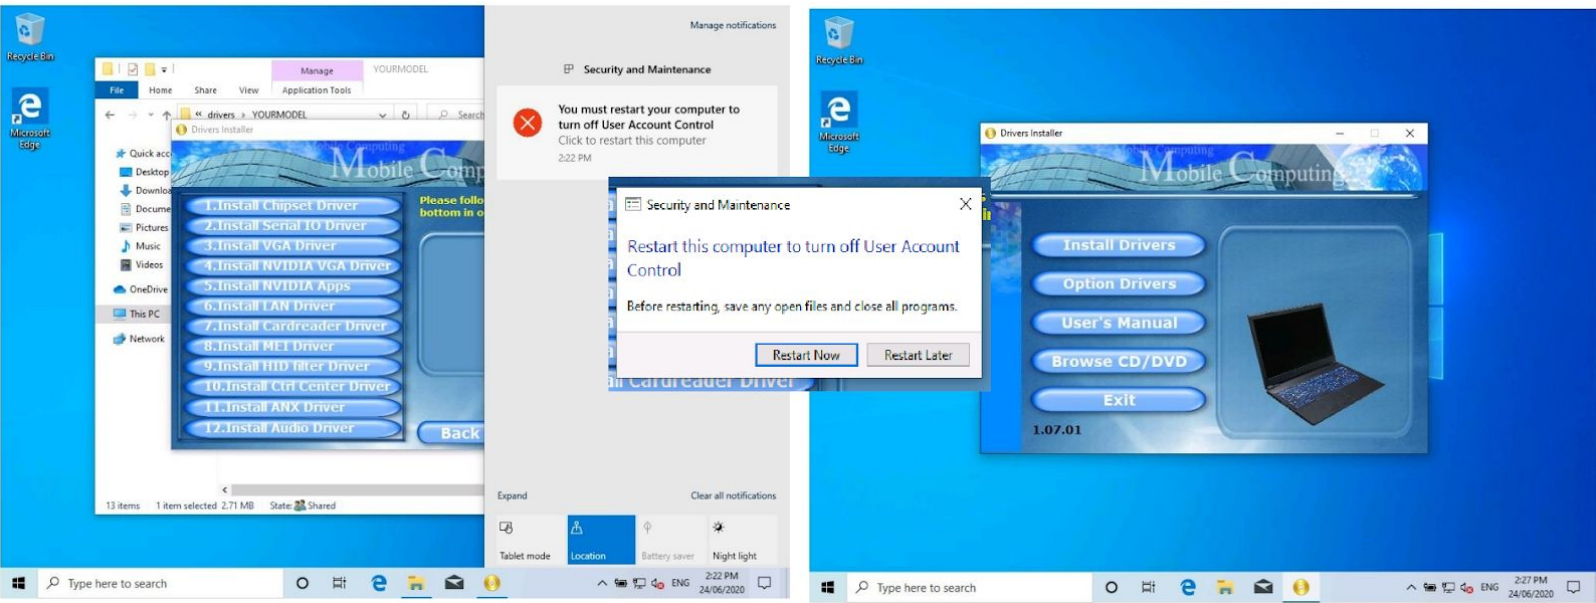


3. Once Restart Now has been selected, your laptop will restart, and the Autorun application to install the drivers will automatically open back up.

Please proceed from here to here to select each of the drivers in the 'Install Drivers' section, and install them by using the default settings and pressing Next, and 'Restart Later' options. You will again be prompted to restart to 'Enable UAC' once finished.

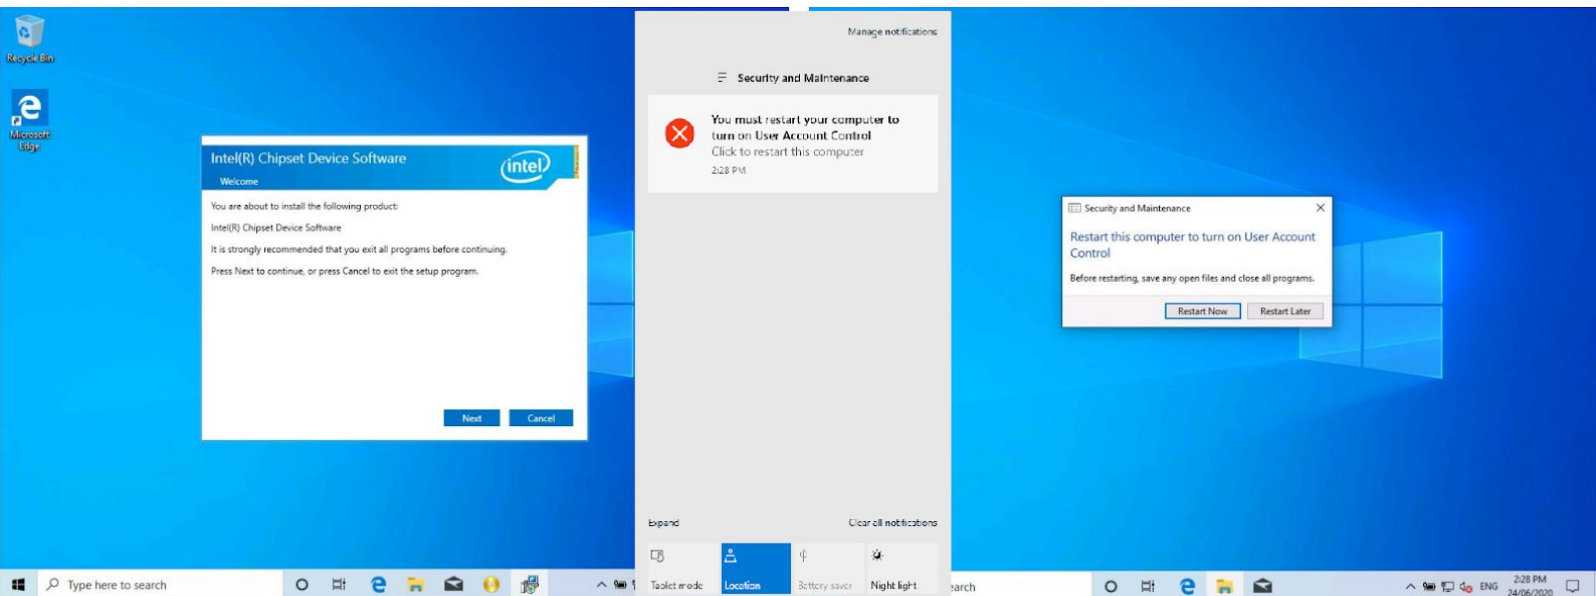

4. After restarting with this UAC Enable prompt, you will need to perform the final step of updating both the Microsoft Store Updates (required), and Windows Updates (recommended). Searching in the Start Menu for these will allow easy access.

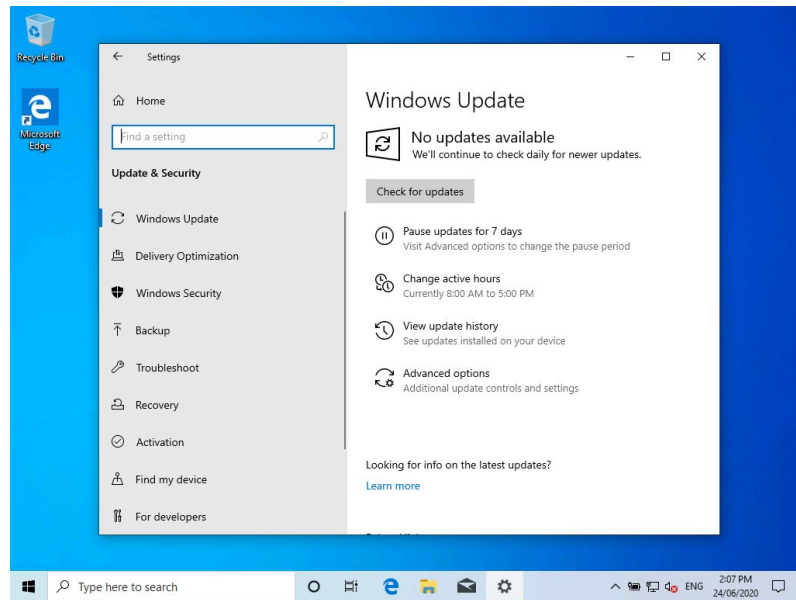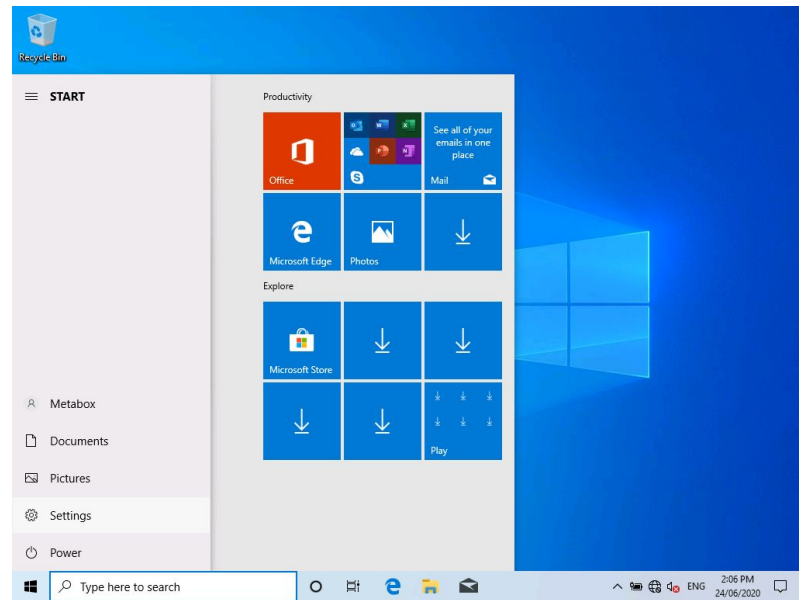

5. From Windows Update you will need to use the 'Check for updates' button, and the Store will require to select 'Downloads and updates' from the top right, followed by 'Get updates'. Please allow 5-10 minutes for completion and then perform a final restart on your laptop. Following which it's ready to go!

